


Installation wrench


for check valves RVE, RKVE and RVVE-32 / 40

1 Installation wrench type M

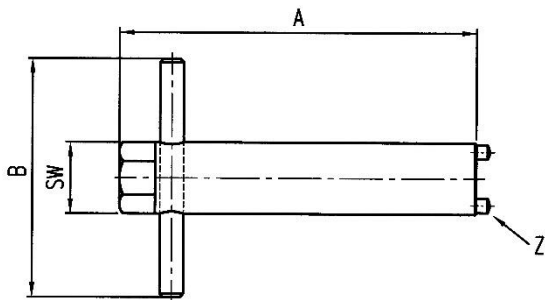

| Type | A | B | SW | Z (Cone) | Item Number |
|-----------|-----|----------------|----|----------|-------------|
| M-04 | 90 | Without toggle | 7 | 6 | 170629663 |
| M-04-A170 | 170 | Without toggle | 7 | 6 | 170629666 |
| M-06 | 105 | Without toggle | 10 | 6 | 170629664 |
| M-08 | 120 | 70 | 13 | 4 | 170629552 |
| M-10 | 135 | 90 | 17 | 4 | 170629553 |
| M-16 | 150 | 90 | 22 | 4 | 170629554 |
| M-25 | 150 | 90 | 27 | 3 | 170629555 |

2 Installation wrench type MKS

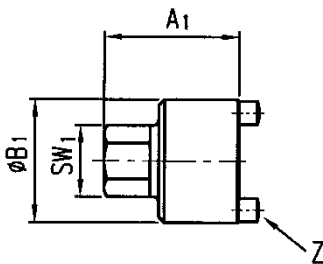

| Type | A1 | ØB1 | SW1 | Z (Cone) | Item Number |
|--------|----|-----|-----|----------|-------------|
| MKS-16 | 35 | 24 | 14 | 4 | 170629556 |
| MKS-25 | 37 | 30 | 19 | 3 | 170629557 |
| MKS-32 | 45 | 38 | 19 | 5 | 170629558 |
| MKS-40 | 47 | 43 | 22 | 5 | 170629559 |

3 Using the Installation wrench

It is generally recommended to mount the check valves with the torques specified in the corresponding data sheets.

4 Order details

To order, use type designation and article number from the table.

info.dah@bucherhydraulics.com

www.bucherhydraulics.com

E2020 by Bucher Hydraulics Dachau GmbH, D- 85221 Dachau

All rights reserved.

The data provided are solely for the purpose of product description and are not to be understood as guaranteed properties in the legal sense. The information does not release the user from his own assessments and tests. Due to continuous improvement of the products, the product specifications given in this catalogue are subject to change without notice.

Classification:430.315.335.31

Reference: 170-P-051600-EN-00