

Pressure valve Relief function

$Q_{\max} = 15 \text{ gpm}$, $p_{\max} = 4300 \text{ psi}$

pilot operated, spool type, proportional solenoid with emergency override

Type series: DBVSA-1LG...




- Screw-in cartridge valve
- For cavity AL
- All external parts with zinc-nickel plating according to DIN EN ISO 19598
- Installation in threaded port body type GALA
- Damped design
- Seated pilot stage
- Fail-safe function
- Excellent stability over the whole pressure and flow range
- High pressure wet-armature solenoids
- The slip-on coil can be rotated, and it can be replaced without opening the hydraulic envelope
- Various plug-connector systems and voltages are available

Description

The invers proportional pressure-relief valves, series DBVSA-1LG..., are size 5, pilot-operated, high performance screw-in valves with a 3/4-16 UNF-2A mounting thread. They consist of a spool-type main stage and a leak-free, poppet-type pilot stage with a falling pressure/current characteristic. Thanks to the damping of the solenoid armature, these pressure-relief cartridges exhibit excellent stability over the whole pressure and flow range. With these proportional pressure-relief cartridges, the relief pressure is dependent on the electrical control current and can be continuously varied. When the solenoid is de-energised (initial position), the relief pressure is the nominal pressure of the applicable spring range (failsafe function). Any pressure at port 1 is additive to the valve setting at port 2, therefore port 1 should preferably be connected directly to tank. In control mode, the

relief pressure is inversely proportional to the change in the required value (amplifier output current). To obtain a reliable pressure setting over the entire pressure range, the overall pressure range is divided into different pressure levels. If a proportional solenoid is faulty, for example, the integral manual pressure setting enables the required pressure to be set mechanically. These valves are mainly used in certain mobile and industrial applications to limit the system pressure. The setting is by means of an adjusting spindle. The slip-on coils can be replaced without opening the hydraulic envelope and can be positioned at any angle through 360°. All external parts of the screw-in valves are zinc-nickel plated and are thus suitable for use in the harshest operating environments. For installation and further information, please refer to the section related data sheets.

Symbol

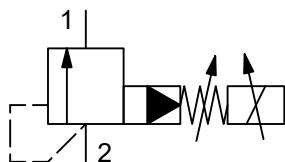

Technical data

General characteristics	Description, value, unit
Function group	Pressure valve
Function	Relief function
Design	Screw-in cartridge valve
Controls	proportional solenoid with emergency override
Characteristic	pilot operated, spool type
Construction size	NG 5
Thread size	3/4-16 UNF-2A
Mounting attitude	unrestricted (preferably vertical, coil down)
Weight	0.88 lb
Cavity acc. factory standard	For cavity AL
Tightening torque steel	30 ft·lb
Tightening torque aluminium	30 ft·lb
Tightening torque tolerance	± 10 %
Minimum ambient temperature	- 22 °F
Maximum ambient temperature	+ 122 °F
Surface protection	All external parts with zinc-nickel plating according to DIN EN ISO 19598
Sealing material	see ordering code
Seal kit order number	NBR: DS-284-N / FKM: DS-284-V

Hydraulic characteristics	Description, value, unit
Maximum operating pressure	4300 psi
Restriction of the operating pressure	3600 psi ¹⁾
Maximum flow rate	15 gpm
Flow direction	see symbol
Hydraulic fluid	HL and HLP mineral oil according to DIN 51 524; other fluids on request!
Minimum fluid temperature	- 22 °F
Maximum fluid temperature	+ 158 °F
Viscosity range	15 ... 380 mm ² /s (cSt)
Recommended viscosity range	20 ... 130 mm ² /s (cSt)
Minimum fluid cleanliness (cleanliness class according to ISO 4406:1999)	class 18/16/13

Hydraulic characteristics	Description, value, unit
Opening pressure	...700 / ...900 / ...1400 / ...2300 / ...3300 / ...4300 psi
Internal leakage flow rate	pressure range 050: ...0.10 l/min pressure range 063: ...0.10 l/min pressure range 100: ...0.15 l/min pressure range 160: ...0.25 l/min pressure range 230: ...0.36 l/min pressure range 300: ...0.45 l/min



NOTE!


¹⁾ Please note that any tank or return-line pressures acting at port 1 are additive to the pressure setting at port 2.

Electric characteristics	Description, value, unit
Actuator type	solenoid coil
Solenoid coils type	D36
Supply voltage DC	12/24 V DC
Supply voltage tolerance	± 10 %
Control current	12 V = 0...1400 mA / 24 V = 0...760 mA
Nominal power consumption	19 W
Relative duty cycle	100 %
Minimum ambient temperature	- 22 °F
Maximum ambient temperature	+ 122 °F
Coil resistance R	Cold value at 68 °F 12 V = 5.8 Ω 24 V = 21 Ω max. warm value 12 V = 8.6 Ω 24 V = 32 Ω
Recommended PWM frequency	200 Hz
Response sensitivity with PWM	< 1 % IN
Reproducibility with PWM	< 2 % pN
Hysteresis with PWM	2...4 % IN
Reversal error with PWM	2...4 % IN
Electrical connection coil	several connection types available, see ordering code
Protection class solenoid coil to ISO 20 653 / EN 60 529	several classes of protection available, see ordering code (with appropriate mating connector and proper fitting and sealing)


Performance graphs

measured with oil viscosity 33.0 mm²/s (cSt)


$p = f(I)$ Pressure adjustment

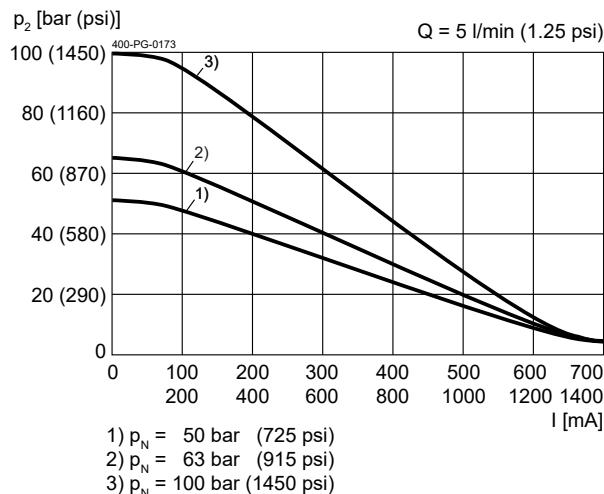


$p = f(Q)$ Pressure-flow rate

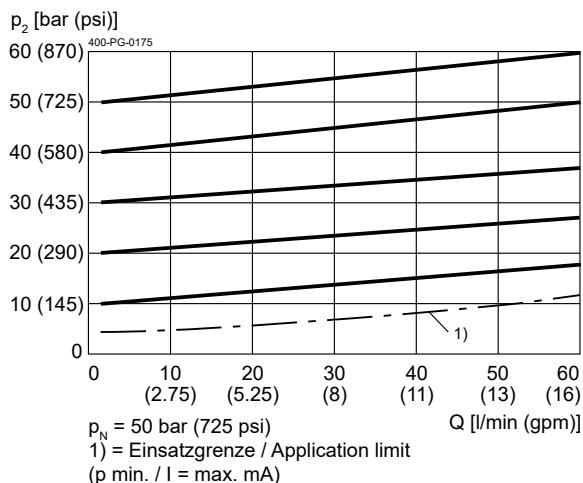


$p = f(Q)$ Pressure-flow rate

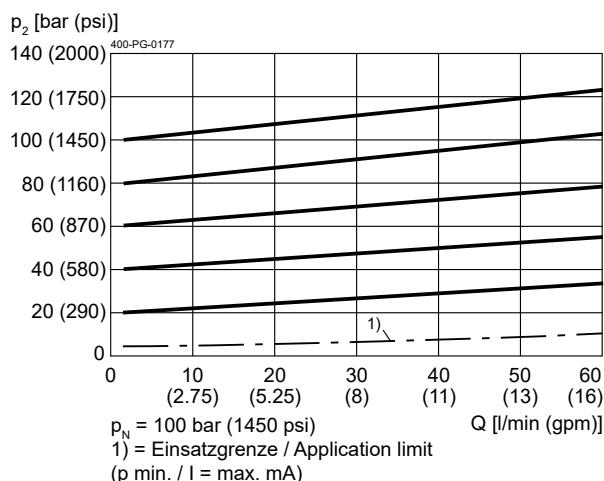


$p = f(I)$ Pressure adjustment

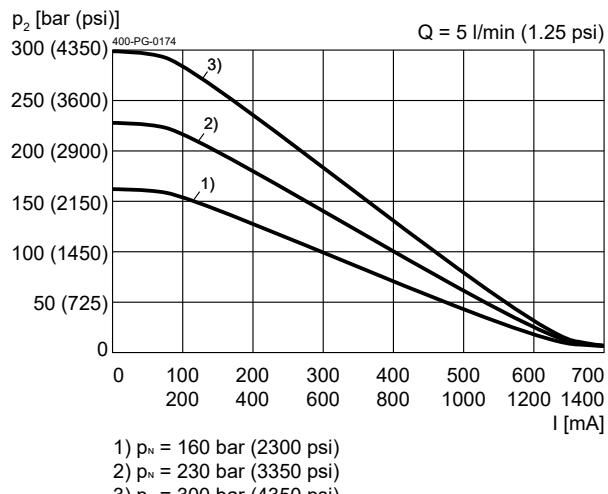


$p = f(Q)$ Pressure-flow rate

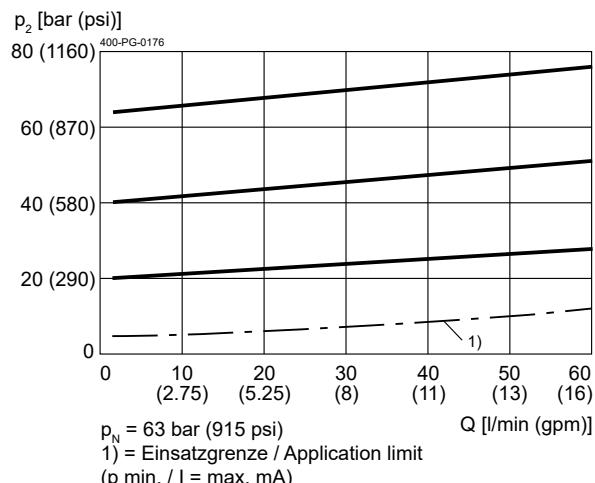


$p = f(Q)$ Pressure-flow rate

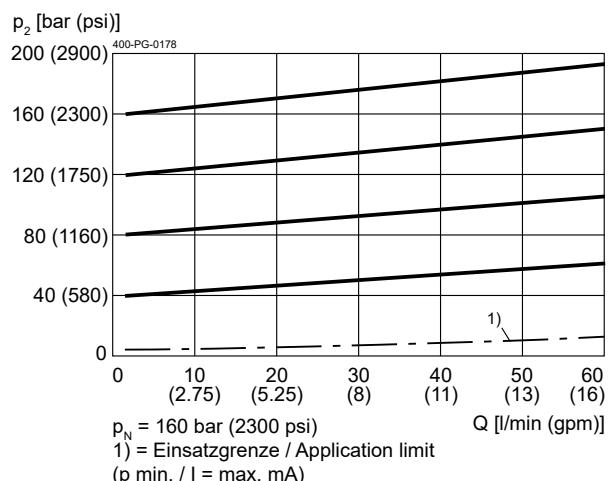

$p = f(Q)$ Pressure-flow rate

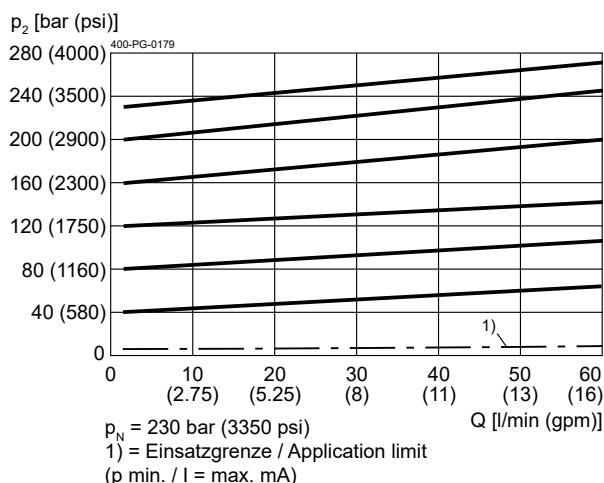


$p = f(Q)$ Pressure-flow rate

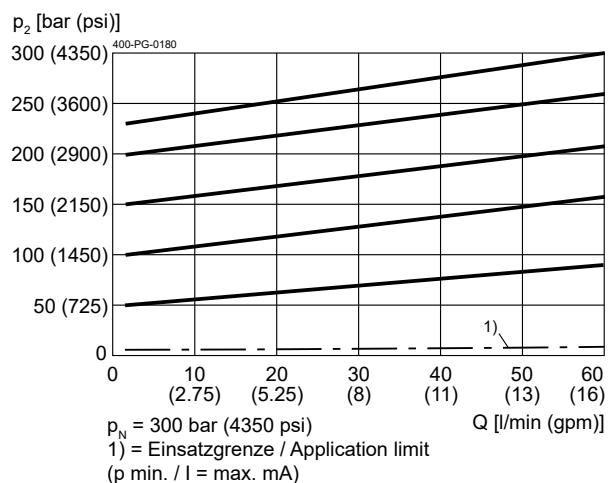

Dimensions and sectional view

Beispiel für die Masseinheit:
Exemple for the dimensional units:

0.79 = 0.79 mm millimeter
(.031) = 0.031" inch

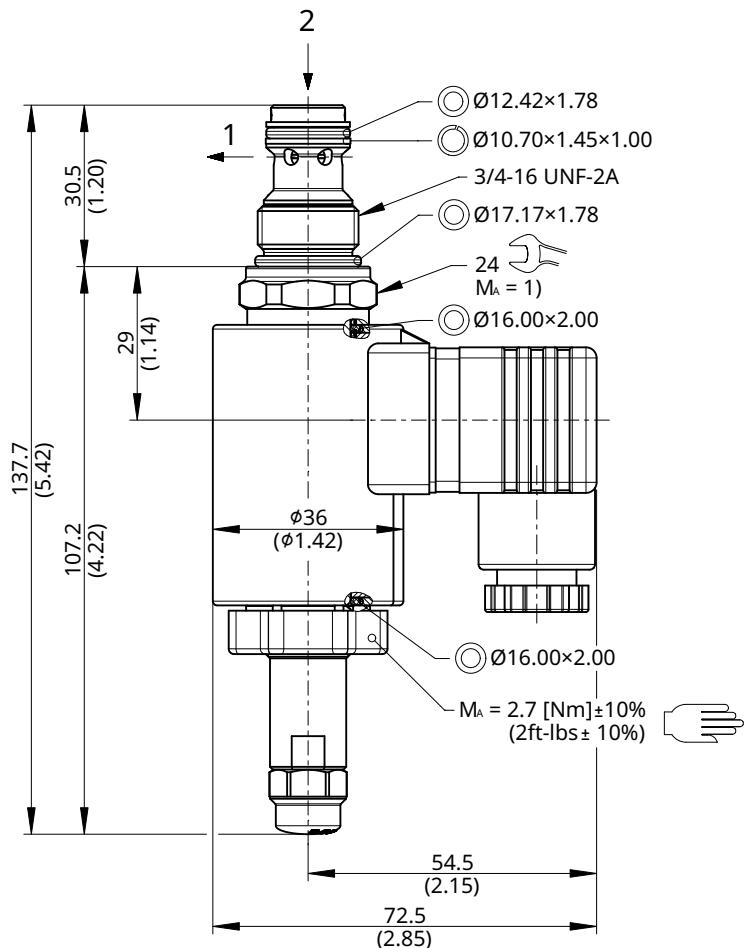

Installation information

NOTE!

If necessary, air can be purged from the proportional pressure-relief valves by using the integral air-bleed screw. The procedure is as follows:

1. Remove the protective cap (pos. A)
2. Slacken the air-bleed screw approx. 2 turns. (pos. B)
3. Switch the pressure-relief cartridge ON/OFF several times until no more air bubbles escape.
4. Tighten the air-bleed screw (pos. B) with the specified tightening torque
5. Fit the protective cap (pos. A)

NOTE!

To achieve the screw-in valve's maximum performance rating, fit the solenoid coil as shown (with the plug pins nearest the valve body).

NOTE!

1) When fitting the screw-in cartridge valve, use the specified tightening torque. The value can be found in the chapter "Technical data".

NOTE!

The seals are not available individually. The seal kit order number can be found in the chapter "Technical data".

ATTENTION!

To prevent any pressure surges, port 1 must be routed to tank with the least possible back-pressure. Any tank pressure acting at port 1 is additive to the pressure setting at the main port 2.

ATTENTION!

Only qualified personnel with mechanical skills may carry out any maintenance work. Generally, the only work that should ever be undertaken is to check, and possibly replace, the seals. When changing seals, oil or grease the new seals thoroughly before fitting them.

Manual pressure setting


These inverse proportional pressure-relief cartridges are equipped as standard with an integral manual pressure setting. If a proportional solenoid is faulty, for example, this manual pressure setting enables the required pressure to be set mechanically. The manual pressure setting can also be used to make minor pressure adjustments directly at the system.

① Note!

Any changes to the manual pressure setting have a direct effect on the factory settings.

1. Remove the protective cap ① .
2. Loosen the lock nut ② .
3. Unscrew (turn to left) the adjusting spindle ③ until the required pressure is set.

4. Tighten the lock nut ② to the specified torque.
5. Fit the protective cap ① .

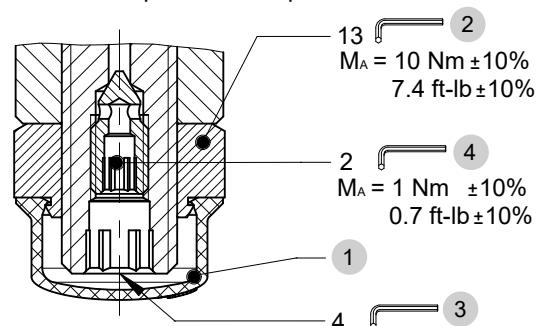


Reset to factory settings

To reset the proportional pressure-relief cartridges to their initial position (the factory setting), a constant flow rate and a pressure gauge that measures the pressure in the main port A are needed. The pressure setting must not exceed the nominal pressure of the spring range in use. The procedure is as follows:

1. Ensure that the solenoid coil is de-energized.
2. Remove the protective cap ① .
3. Loosen the lock nut ② .
4. Unscrew the adjusting spindle ③ to its end-stop.
5. screw in the adjusting spindle ③ until the pressure on the gauge reaches the nominal pressure (pN) of the spring range in use.

6. Tighten the lock nut ② to the specified torque.

7. Fit the protective cap ① .

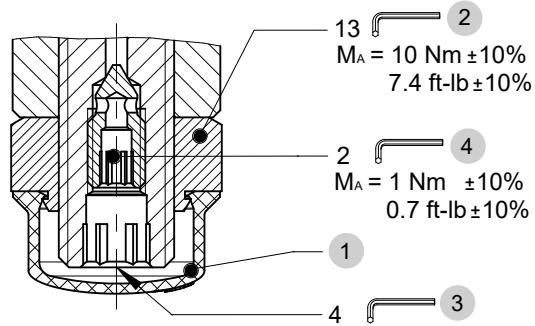


Air-bleeding

If necessary, air can be purged from these proportional pressure-reducing cartridges by using the integral air-bleed screw. If the cartridge is mounted as preferred (solenoid coil hanging), the valve behaves as self-venting. To vent the valve, follow these steps:


1. Remove the protective cap ① .
2. Loosen the air-bleed screw ④ approx. 2 turns.
3. Switch the pressure-relief cartridge ON/OFF several times until no more air bubbles escape.
4. Tighten the air-bleed screw ④ to the specified torque.

5. Fit the protective cap ① .

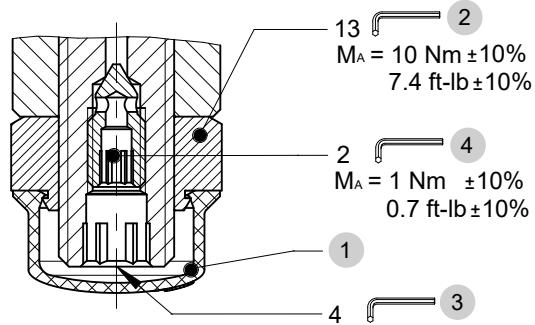


Application example

The application example shows a reversible fan drive.

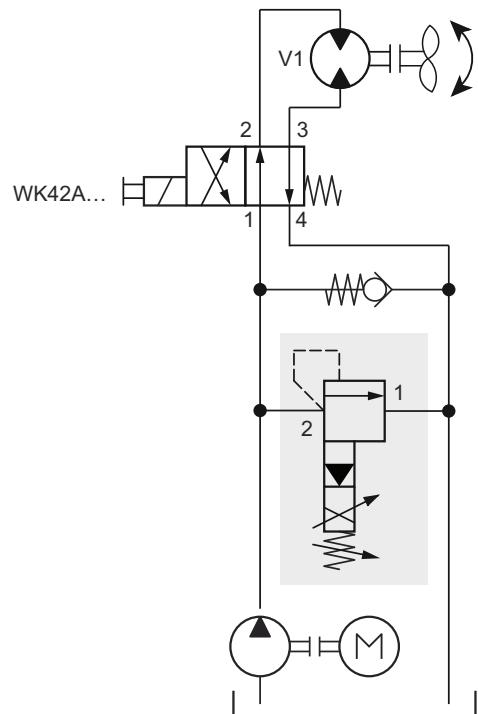

Ordering code

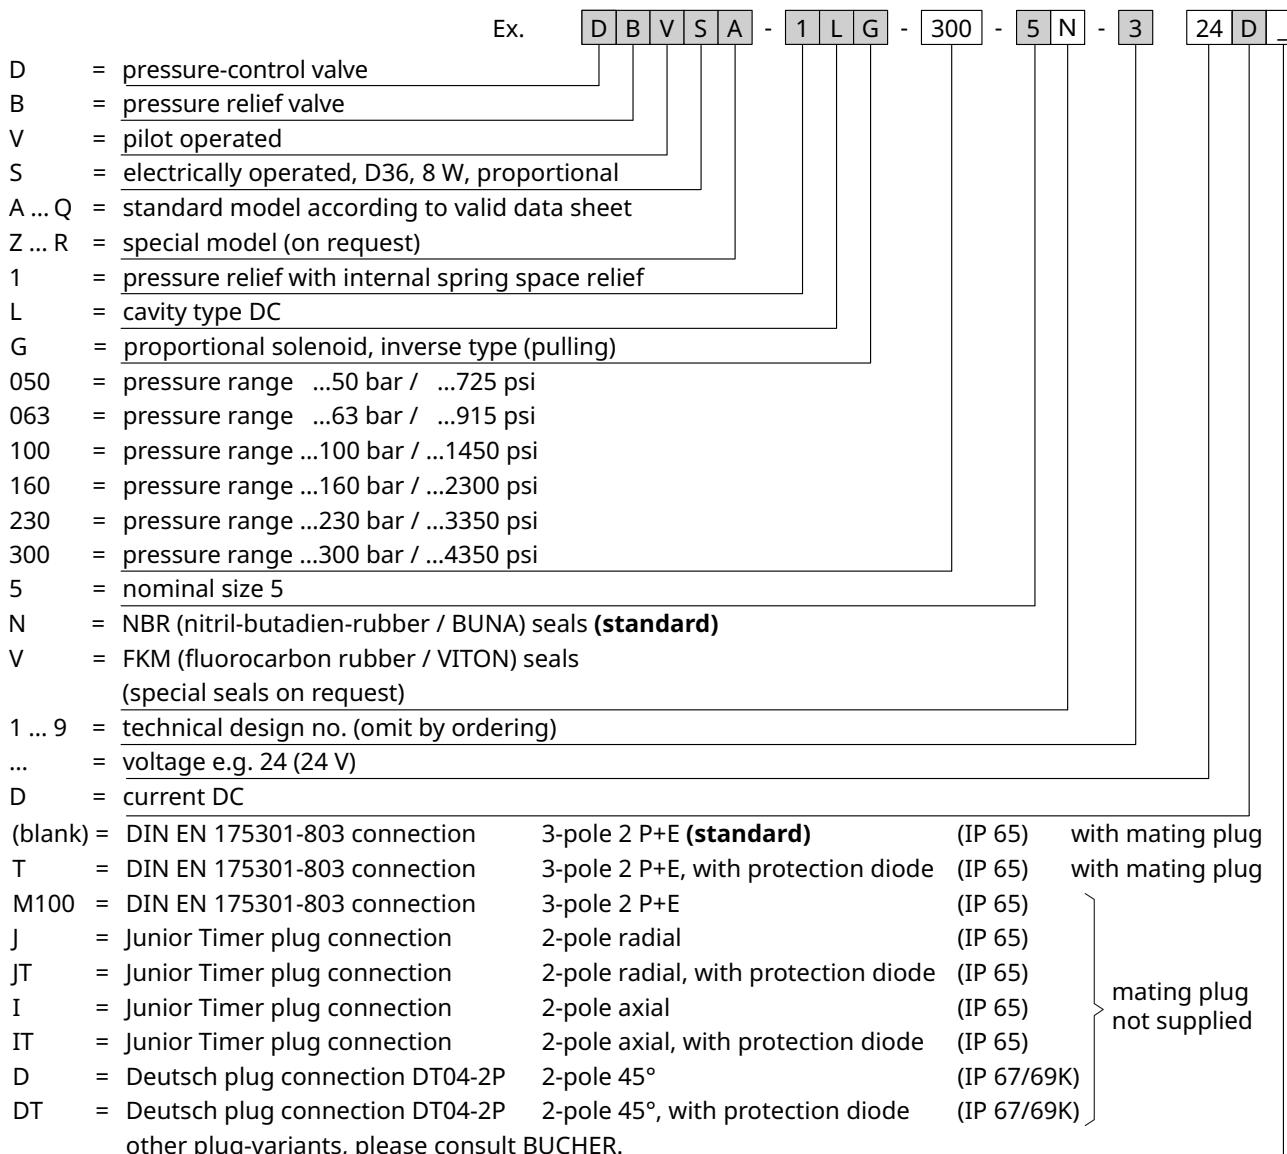

IMPORTANT!

IMPORTANT: Not every combination of voltage values, current type and plug connections available

Related data sheets

Reference	Description
400-P-040011	Form tools
400-P-040171	Cavity AL
400-P-720101	Threaded port body GALA
400-P-120110	Solenoid coil D36

info.ch@bucherhydraulics.com

www.bucherhydraulics.com

© 2026 by Bucher Hydraulics AG Frutigen, 3714 Frutigen, Switzerland

All rights reserved.

Data is provided for the purpose of product description only, and must not be construed as warranted characteristics in the legal sense. The information does not relieve users from the duty of conducting their own evaluations and tests. Because the products are subject to continual improvement, we reserve the right to amend the product specifications contained in this catalogue.